CONTROLS ZONECONTROL

For EC5000 24 V 20 W, 35 W, with analog interface



/ Application area

Zero-pressure accumulation (ZPA) conveying for systems with medium to high number of conveyor zones. Applications with or without PLC, but without fieldbus.



The ZoneControl is a single-zone control for a RollerDrive EC5000 and a zone sensor. The ZoneControl can be used to create stand-alone, zero-pressure accumulation conveyors which require no higher-level control (PLC). Additional functions and communication to upstream and downstream conveyors can be implemented via digital inputs and outputs (I/Os).

The advantage is that the ZPA logic is contained in the ZoneControl and does not have to be programmed within a PLC. DIP switches can be used to set the RollerDrive speed and direction of rotation as well as the logic (single or train release). For all ZoneControl connected with each other, the speed can also be changed with an analog signal and a cumulative error signal can be read out.

The wiring of the voltage supply is done via switching wire and communication using commercial CAT5 patch cables (Ethernet cable). The ZoneControl is only partially suited when a tracking of conveying goods or the control of the RollerDrive with start and brake ramps is being planned or a large number of additional functions is to be used.

The ZoneControl shows its strength in the fact that it does not have to be addressed, which makes an exchange in case of a failure extremely easy, and it can easily be configured with DIP switches.



48V

20W

35W

50W

ΑI

BI

40 © 06 | 2020 Interroll

CONTROLS ZONECONTROL

For EC5000 24 V 20 W, 35 W, with analog interface

Functions

- · Logic for zero-pressure accumulation conveying incl. initialization
- · Communication with upstream and downstream zones via peer-to-peer connection
- · Speed setting in 8 increments via DIP switches or analog signal
- · Direction of rotation setting via DIP switches or external digital signal
- · Connection of a zone sensor
- · Connection of a start sensor for the start of the conveyor line
- · Determination of NPN or PNP switching logic
- · Switching a second RollerDrive into the zone
- · Additional functions: Running the conveyor empty, error signaling of all connected zones, external start or stop signal
- · Voltage limitation via brake chopper

Technical data

24 V DC
19 to 26 V DC
ZoneControl with sensor: approx. 0.5 A + current of RollerDrive EC5000*
Present, non-replaceable
IP20
32 to 104 °F
-40 to 176 °F
3280 ft (at higher altitudes, a reduction of performance values is possible)
Fine-wired, 1.5 mm ² (AWG 16)
Fine-wired, 0.08 to 0.5 mm ² (AWG 28 to 20)

^{*} The power of EC5000 depends on the application, e.g., conveying good weight, conveying speed, acceleration ramp, and on the EC5000 used (refer to the corresponding chapter).

© 06 | 2020 Interroll 41

CONTROLS ZONECONTROL

For EC5000 24 V 20 W, 35 W, with analog interface



Dimensions

48V


20W

35W

50W

ΔI

BI

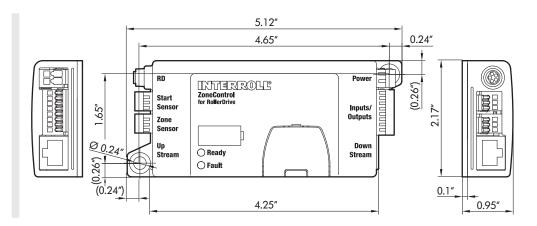

Accessories

- · RollerDrive EC5000 extension cable, page 62
- · Switching power supply HP5424, page 52

Ordering information

- · Article number: S-1101459
- · Scope of supply: Plug for voltage supply, plug for inputs and outputs, one plug each for start and zone sensor, polymer tool for cabling